


SF Asennusohje  
 S Installation instruktioner  
 N Installationsinstruktioner  
 DK Installationsinstruktus  
 NL Installatievoorschrift  
 D Montageanweisung  
 F Instructions d'installation  
 ES Instrucciones de montaje  
 I Istruzioni di montaggio

## ML7425A6008/B6007 Electric Linear Valve Actuators

### INSTALLATION INSTRUCTIONS

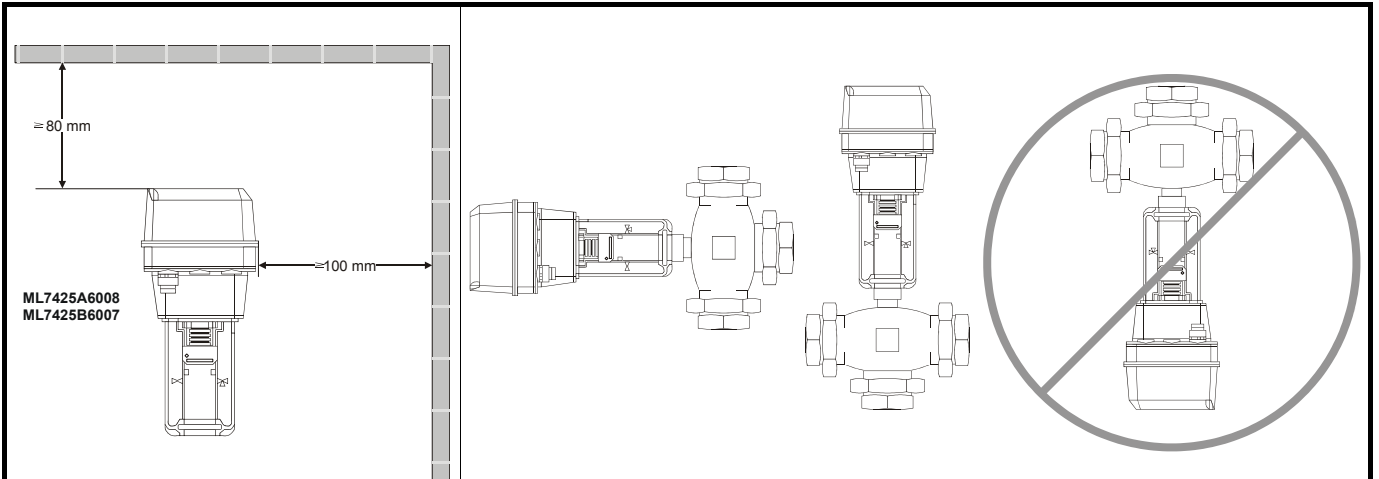

**A1-A7: Installation**

mounting  
 D Einbau  
 F montage  
 I montaggio  
 NL montage  
 DK montere  
 N monterings  
 FIN asentaminen  
 S montera  
 E montaje

**A1**

**A2**


**A3**

**A4**

POSITION	0(2)...10 V	2...10 V
Y	0(2)...10 V	2...10 V
↓	24 V↓	24 V↓
24 V~	24 V~	24 V~
1 ↓		
2 ↑		
B		

**A5a**

POSITION	0(2)...10 V	2...10 V
Y	0(2)...10 V	2...10 V
↓	24 V↓	24 V↓
24 V~	24 V~	24 V~
1 ↓		
2 ↑		
B		

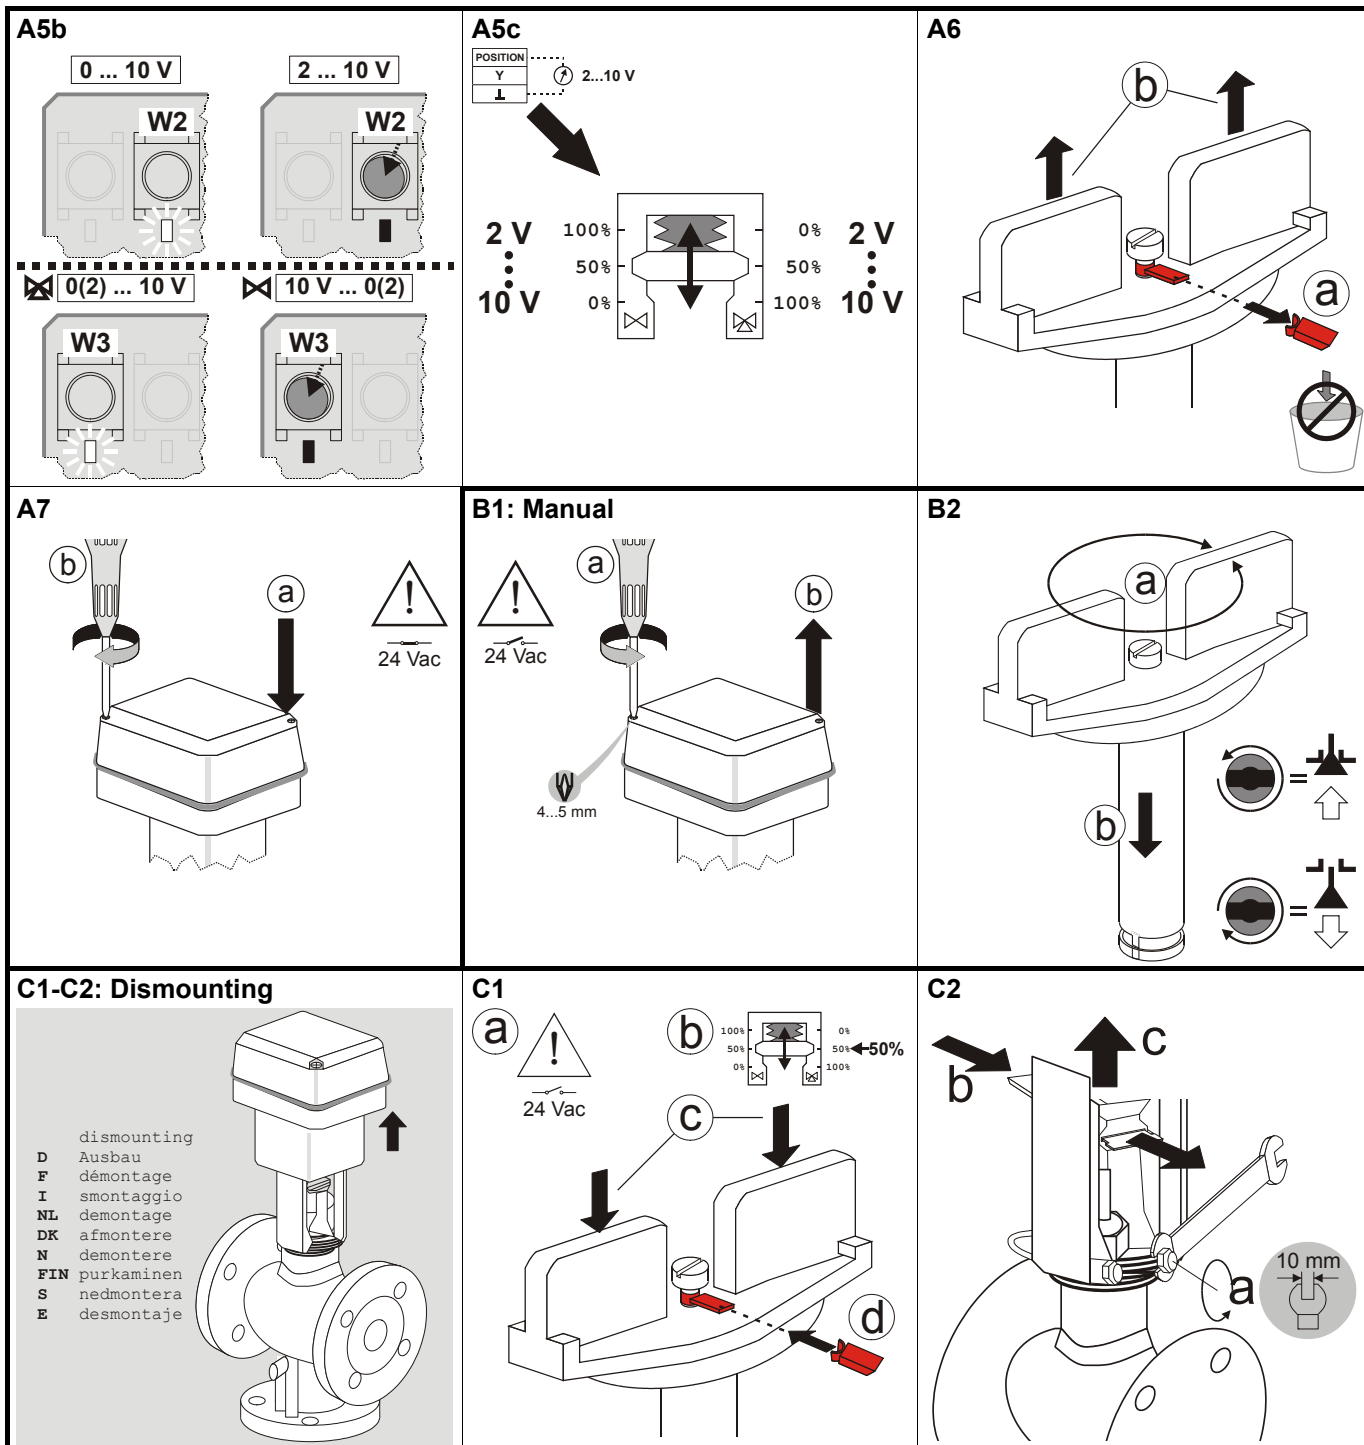

## Automation and Control Solutions

Honeywell GmbH  
 Böblinger Strasse 17  
 71101 Schönaich  
 Germany

Phone: (49) 7031 63701

Fax: (49) 7031 637493

<http://ecc.emea.honeywell.com>

Subject to change without notice. Printed in Germany

MU1B-0351GE51 R1110C