 


**Important: Retain these instructions**



### Installation


#### 1 Install IQ3xcite and I/O Modules (IQ3XCITE/96/... only)




IQ3xcite Installation Instructions,  
TG200626

xcite Standard I/O Modules  
Installation Instructions,  
TG200627


#### 2 Switch Off

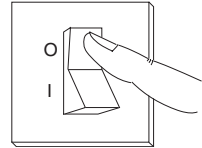


#### 3 Open Flaps

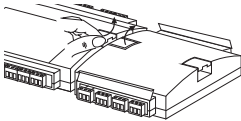


#### 4 Insert XCITE/IC

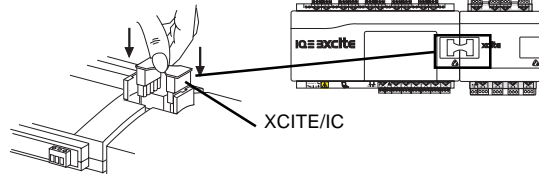

#### 5 Close Flaps

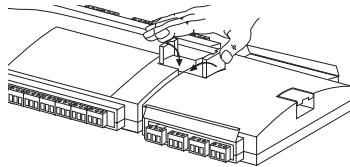

#### 6 Switch On

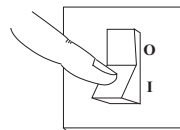

Manufactured for and on behalf of the Environmental and Combustion Controls Division of Honeywell Technologies Sàrl, Ecublens, Route du Bois 37, Switzerland by its Authorized Representative, Trend Control Systems Limited.

Trend Control Systems Limited reserves the right to revise this publication from time to time and make changes to the content hereof without obligation to notify any person of such revisions or changes.

#### Trend Control Systems Limited

P.O. Box 34, Horsham, West Sussex, RH12 2YF, UK. Tel: +44 (0)1403 21888 Fax: +44 (0)1403 241608 [www.trend-controls.com](http://www.trend-controls.com)

#### Trend Control Systems USA

6670 185th Avenue NE, Redmond, Washington 98052, USA. Tel: (425)869-8400, Fax: (425)869-8445 [www.trend-controls.com](http://www.trend-controls.com)