 


Important: Retain these instructions




These instructions shall be used by trained service personnel only

If the equipment is used in a manner not specified by these instructions, the protection provided by the equipment may be impaired.

CONTENTS


1	Box contents.....	1	3	Installation.....	1
2	Storing.....	1	4	Disposal.....	2

1 BOX CONTENTS

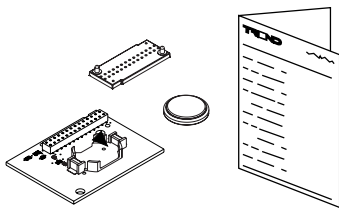

XCITE/BBC Installation
Instructions (TG200686)

2 STORING

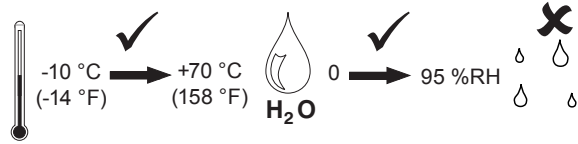

3 INSTALLATION

1 Switch off

2 Isolate I/O

also isolate any I/O modules

WARNING: The connecting leads may be connected to supplies. Isolate before touching.


3 Open Panel

WARNING: Opening the panel may expose dangerous voltages.
417-IEC-5036


4 Remove Auxiliary Board Cover

3 INSTALLATION (continued)


5 Plug in Battery Board
 apply plate
 plate supplied with XCITE/BBC

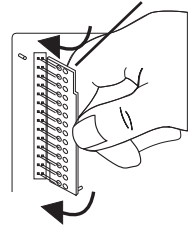


apply board to plate

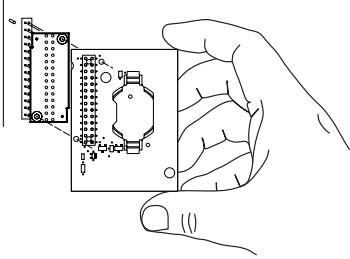

press board home

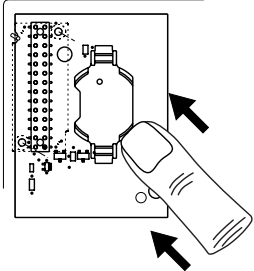


6 Insert Battery
 CR2032 3V supplied with XCITE/BBC

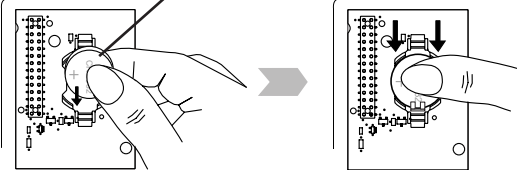


Warning: The lithium battery must not be recharged, disassembled, burnt or short circuited. Misuse may cause explosion or fire. Dispose of carefully. Refer to Health and Safety Executive Guidance Note GS43 - see section 4, Disposal, below.


7 Replace Auxillary Board Cover

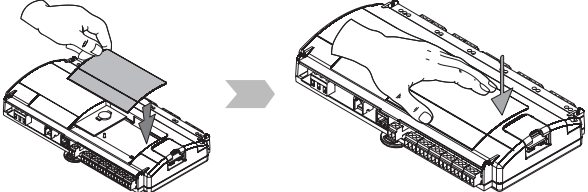

8 Close Panel

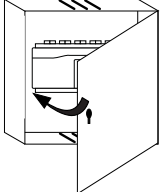


9 Reconnect Supply to I/O

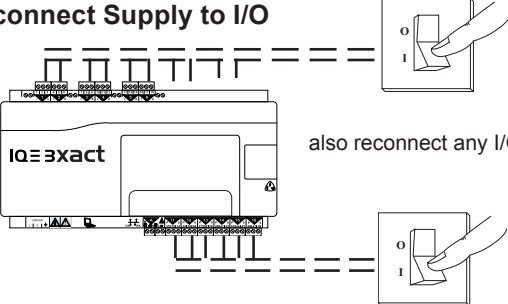


also reconnect any I/O modules

10 Switch On

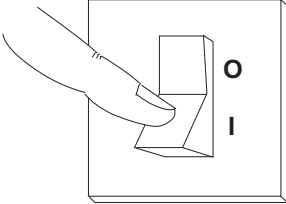

4 DISPOSAL



WEEE Directive:
 At the end of their useful life the packaging and product should be disposed of by a suitable recycling centre.
 Do not dispose of with normal household waste.
 Do not burn.

Please send any comments about this or any other Trend technical publication to techpubs@trendcontrols.com

© 2014 Honeywell Technologies Sàrl, ECC Division. All rights reserved. Manufactured for and on behalf of the Environmental and Combustion Controls Division of Honeywell Technologies Sàrl, Z.A. La Pièce, 16, 1180 Rolle, Switzerland by its Authorized Representative, Trend Control Systems Limited.

Trend Control Systems Limited reserves the right to revise this publication from time to time and make changes to the content hereof without obligation to notify any person of such revisions or changes.

Trend Control Systems Limited

Albery House, Springfield Road, Horsham, West Sussex, RH12 2PQ, UK. Tel:+44 (0)1403 211888 Fax:+44 (0)1403 241608 www.trendcontrols.com

Trend Control Systems USA

6670 185th Avenue NE, Redmond, Washington 98052, USA. Tel:(425) 869-3900 Fax:(425) 869-8445 www.trend-americas.com